

Toner Model	Printer Model
HP & CANON PRINTERS	
85A/36A/35A/78A/326/126/726/926	HP LaserJet P1005/1006, LaserJet P1500/1505/M1522N/1522NF/1120/1522; LaserJet Pro P1566/1560/1606dn/1600f; LaserJet Pro P1100/1102/1102W, Laserjet PrM1132/1134/1136/1137/1138/1139 Laserjet Pro 1218nfs; Black, With Universal Chip, Canon LBP-6000/6030/3050/3150/3010/3100/3108/3018, Canon LBP 6200/6230
05A/80A	HP Laser Jet P2035//P2050/P2055N/ Pro 400/M401/MFP425DN, Canon - 119/319/519/719
13A/15A/24A/EP 25	HP Laser Jet 1000/1200/1220/3300/3310/3330/3380, Canon LBP-1210
49A/53A	HP Laser Jet 1160/1320/1320N/1320NW/1320T/1320TN/P2015 Canon LBP 3300
26A	HP LaserJet Pro M402n/d/dn/dw, MFP M426dw/fdn/fdw
CF283A	HP LaserJet Pro MFP M201n/M202n/M225dn/M226D
17A	HP Laser Jet Pro M102A / MFP 130A Printer.
12A	HP Laser Jet P1010 /1012/1015/1020/1022
CF230A	HP LaserJet Pro M203dn/M203dw Printer HP LaserJet Pro MFP M227fdw
CF279A	LaserJet Pro M12a/M12w /MFP M26a /M26nw
137/337/537/737	Canon LBP151dw
CE255A	HP Laser Jet P3010/P3015/Canon LBP 6700/6710i/6750/6780x/511dw/MF515dw/512X/515X/6750DN/ 6000pg
BROTHER PRINTERS	
TN-2060/2280	HL-2130/HL-2240D/HL-2250DN/HL-2270DW/DCP-7055/DCP 7065DN/MFC-7360/MFC-7860/Fax-2840
TN-4100	HL-6050DN
TN-3370/ 3350	HL-5440/HL-5450DN/HL-6180DW/MFC-8510DW/DCP-8110DN/MFC-8910DW
TN-1000	HL-1110/DCP-1510/1810/MFC-1815/1210W/DCP-1610W/MFC-1910W
TN-2355/2305	HL-2320D/L2365DW/MFC-2700DW/DCP-2540
TN-2345	BROTHER HL-L 2335 D , HL-L 2370DN ,DCP-2535 D, HL-L2386, 2385DW,2376DW,2375DW,2351DW,DCP-L2550DW

TN-3487	Brother HL-L5200 DW//L6200 DW/DWT/L6250 DW/L6300 DW/L6400 DW/ DCP-L5500 DN/L5600 DN/L5650 DN/L5755dn/L5750dw//MFC-L5700 DW/5750DW/L5800 DW/L5900 DW/L6700 DW/L6800 DW/L6900 DW
TN-40	HL-2140/HL-2150N/HL-2170W DCP-7030/MFC-7340
DR-211	BROTHER HL-L 2335 D , HL-L 2370DN ,DCP-2535 D, HL-L2386, 2385DW,2376DW,2375DW,2351DW,DCP-L2550DW
DR-2255	HL-2130/HL-2240D/HL-2250DN/HL-2270DW/DCP-7055/DCP 7065DN/MFC-7360/Fax-2840
DR-2125	HL-2140/HL-2150N/HL-2170W DCP-7030/MFC-7340
DR-3115	HL-5240/HL-5340D/HL-5350DN
DR-3355	HL-5440/HL-5450DN/HL-6180DW/MFC-8510DW/DCP-8110DN/MFC-8910DW
DR-1000	HL-1110/DCP-1510/1810/MFC-1815/1210W/DCP-1610W/MFC-1910W
DR-2305	HL-2320D/L2365DW/MFC-2700DW/DCP-2540DW
DR-3405	Brother HL-L5000D, L5100 DN, L5200 DW/DWT, L6200 DW/DWT, L6250 DW, L6300 DW, L6400 DW, L6400 DWT DCP-L5500 DN/L5600 DN/L5650 DN/L5700dn/L5750dw, DCP-L6600dw/MFC-L5700 DW/5750DW/L5800 DW/L5850 DW/L5900 DW/L6700 DW/L6800 DW/L6900 DW
DR-310	Brother MFC-9460CDN/4150CDN
SAMSUNG PRINTER	
Samsung-1043	Samsung ML-1666/1661/1665/ SCX 3210/3218/ML-1866
Samsung -101	Samsung ML 2160/2161/2162/2163/2165/2166/3400/3401/3405/ 3406
Samsung 2010	Samsung ML-2010/2015/2510/2570/2571/4521/4321
Samsung-111	Samsung M 2020/2070
Samsung-117	Samsung SCX -4650/4655

